


2005 – 2008 Corvette Battery Cover

If you are installing the 2005 series cover, please be sure to do a trial fit prior to attempting the actual install. Since the cable routing is on the front side of the 2005 battery, make sure that the cables are in correct position to allow the cover to be attached. If necessary, loosen the battery cables and rotate them appropriately to ensure fitment of the cables to the opening in the cover. **Unlike the 2006/2007 the 2005 and 2008 covers will not fit into completely into the tray due to the cables (still fit fine). Also any charging or jump starting should be done at the fuse block as indicated in the owner's manual**


2006-2007 page 1/ 2 2005 page 3 2008 page 4

On the 2006/2007, the cables are attached from behind the battery and there is no cable adjustment needed. However, please examine the battery placement in the tray. There needs to be a small space for the cover to sit down between the battery and the tray edge. If not, loosen the battery clamp and slide the battery towards the passenger fender a ¼ of an inch. This will provide ample room for the cover to fit.

Please note: Be careful when installing and removing the cover. Inadvertent contact with other objects can scratch or damage a painted finish. We recommend that you cover any needed areas with Blue Painters tape to avoid unnecessary marring. The tape provides cushioning and can be removed easily with no residue remaining.

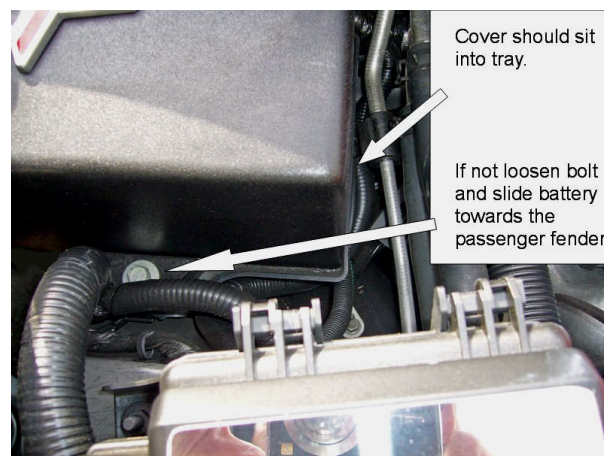

Install the enclosed Velcro – The Velcro will attach to the battery in the areas shown. These areas must be free of wax and grease. Clean and thoroughly dry using a grease/wax remover or isopropyl alcohol. Temp should be above 50 so if it's cold out do it after a ride. You can either install one side on the battery in advance (suggested) pressing firmly or remove the backing and press in place at the same time you install the cover. I would not try to remove the cover for 24hrs to allow maximum adhesion

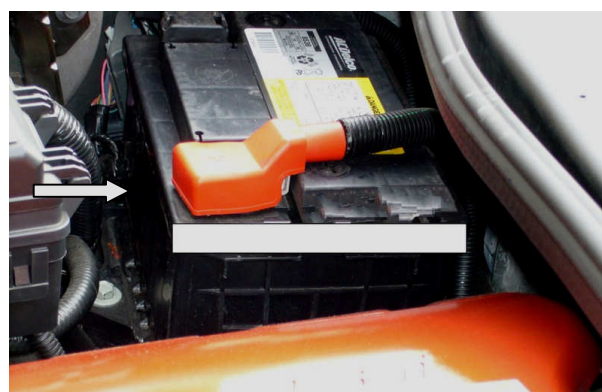

2) Slip the cover in place as shown – Start by holding the cover sideways at about a 45 degree angle above the battery. Carefully lower it in on the angle while bringing the outward edge toward the fender. Lower completely, and just be sure it sits flat into the battery tray. For the 2006/ 2007 - Once in place, the cover should be pressed up against the front and drivers side of the battery to allow the Velcro to make a secure contact. The 2005 will not sit in the tray, it will just rest up against the battery itself. The emblem shown (same emblem as on the front bumper) can be ordered from GM to enhance your cover. **TIP – you can lift the weather stripping up make the install easier see arrow.**

2006 /2007 install procedure ----

See next page for 2005 install procedure and last page for the 2008



2005 install procedure



Insert this end down
over the cables

Continue down all the way
allowing the end to clear the
hood striker



2008 install procedure

On the 2008 they use a larger battery so the positive cable cannot go over the top and is now routed around the side.



You will need to shift the battery to the passenger side fender about 2". Generally you can just tap the battery with you palm and it will slide over. If not loosen the hold down screw (red "X") , move and retighten. Now follow the install procedure for the 2006/2007 on page one.